

 
1 Check Contents




Please keep the packaging for future storage or transport




RM One system
Keyboard & Mouse

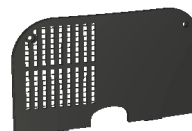

Rear Cable Cover

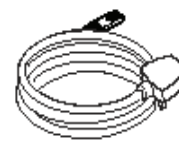 

AC power lead

 

RM Recovery CDs
(where supplied)



You may also have purchased optional accessories such as a desk bolt and padlock.

 
2 Setting Up

Please Note: The RM One can weigh up to 18kgs. Please ensure you use normal manual handling precautions when lifting and positioning the system. Your RM One includes a height adjustable monitor. Always lift the RM One by the base unit and NOT the monitor section.



Position the RM One in your desired location

Connect your keyboard, mouse and Ethernet cable to the connectors in the rear of the RM One. The mains connects to the power supply on the right. There is an internal speaker mute switch located above the motherboard connectors (see fig1). If you wish to use the cable clamp you will need to unscrew the cable clamp screw. Remove the cable clamp, position the cables in the rubber grip and screw the cable clamp back into position (see fig2). Switch the RM One on using the Power Switch on the silver panel as shown above (see fig3). Fitting the cable cover door will prevent the desired functionality from being changed.

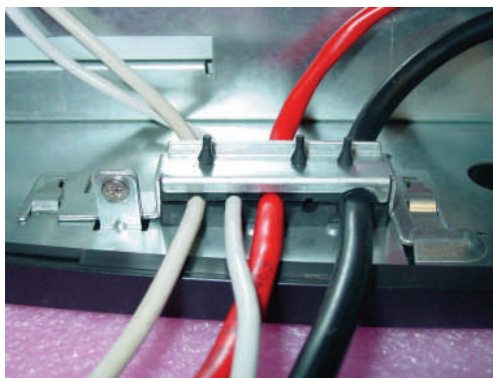

3 Using your RM One PC

Useful Features:

LCD Power Button

This switches off the sound and display without powering down the system fully.

Front Panel Features

The front panel houses a volume control (if fitted), which affects both the speakers and headphone volume. Rotate to the right to increase volume, and left to reduce the volume. In addition, there is a stereo headphone socket, microphone socket, a IEEE1394 (Firewire) socket and two USB2.0 sockets.

Variable Speed Fans

The RM One will change the speed of the fans depending on the applications being run. You may hear the fans speed up and slow down occasionally. This is completely normal and helps to reduce the noise produced from the RM One when the system is not being utilized.

Audio Speaker Mute

There is an internal speaker mute switch located above the motherboard connectors. This allows the speakers to be disabled without disabling the headphone socket.

Height Adjustable Monitor

The height of the monitor can be adjusted by 120mm. Grasp both sides of the monitor and move up and down to adjust the height.

Troubleshooting:

My RM One will not power up?

Ensure you have the mains cable connected. Some RM One systems are shipped with a mains switch on the power supply next to the AC cable inlet. Ensure this is set to the on position. The correct on/off power button to turn on the system is located on the silver panel.

My RM One powers up but there is no display on the flat panel display?

Press the LCD Power button on the front of the flat panel display. Illuminates blue when screen is on.

My RM One shows a shimmering or corrupt display.

Press menu on the monitor module and select reset factory defaults. The screen will flicker and change colour for a few seconds before settling on the correct size, brightness and contrast.

I cannot unscrew the rear cover of the RM One.

The RM One is fitted with security screws. Please contact your sales representative to obtain a matching security key.

Where can I find the RM One User Manual?

A manual can be found by navigating to the folder c:\rm\manuals



4 Safety Notice

The mains cable provided has a sealed moulded plug and fuse. Always use the supplied cable, plugged into a standard 3-pin power socket. Always replace a blown fuse with one of the same rating, and ensure the fuse cover is refitted. Check the condition of cables regularly. If any are damaged, replace them immediately. Place the RM One near to outlet sockets to avoid the trip hazard of trailing cables.

Do not use the RM One in conditions of extreme temperature, humidity, dust, vibration, or electromagnetic radiation. They may damage your RM One or make it unsafe to use.

To avoid over-heating ensure the ventilation slots on the rear are not obstructed. Leave a gap of at least 10cm (4 inches). When the RM One is switched on avoid sudden movement of the unit. Hard disks are easily damaged if moved whilst operating. Failure to comply with these guidelines may cause damage to the RM one and are not covered by any warranty. The RM One User Manual contains more information and may be found pre-installed on your RM One system.

ONE General Functions

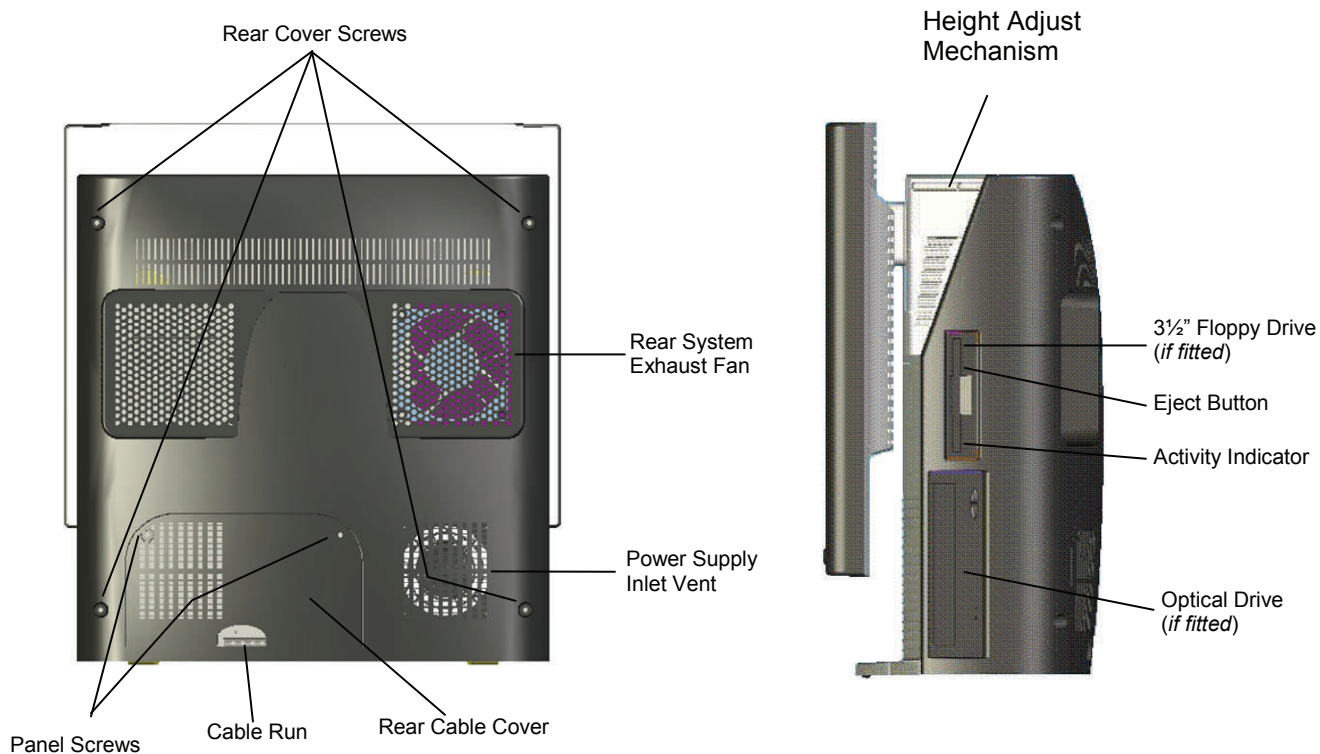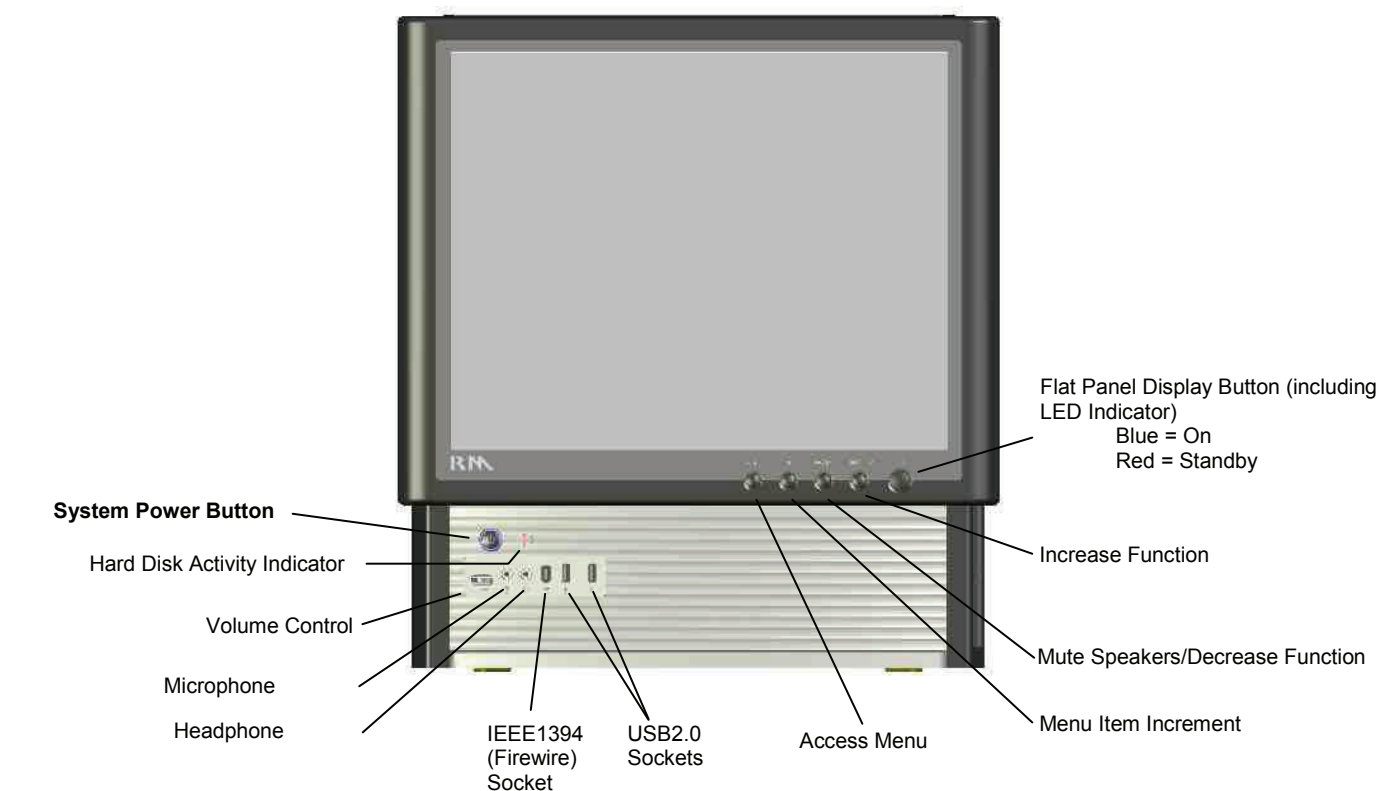

See the RM One PC user manual for further details.

RM plc, New Mill House, 183 Milton Park, Abingdon, OX14 4SE
www.rm.com/support

Version 2